


# 5iE

## Pairing and Testing


Before pairing, please make sure the **Power Base** and **Boiler Receiver** are powered. If the LED on the Boiler Receiver is not slowly flashing RED, indicating that it is ready to be paired, reset its pairing by pressing and holding the power button for 6 seconds.

1

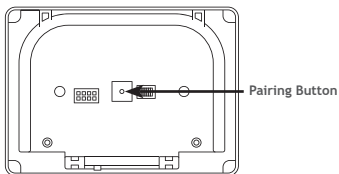


Press the Pairing Button on the **Power Base**, as shown above, using a short length of wire or similar to begin pairing

2

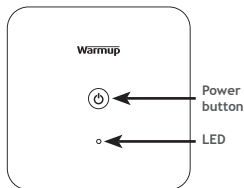


The LED on the **Boiler Receiver** will stop flashing RED, indicating a successful connection.

3

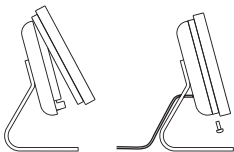

Attach the **Thermostat Face** to the **Power Base** and tighten both closing screws.

4

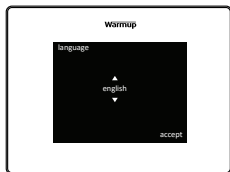

The **Power Base** will now be repaired with the **Boiler Receiver**.